



1-4 Button Remotes

For help, reach out by phone or website chat. 1-800-354-3643.
www.geniecompany.com

©2022 The Genie Company
One Door Drive, Mt. Hope, OH 44660, USA
1-year warranty, visit www.geniecompany.com for details.
Pat. www.geniecompany.com/patents

⚠ WARNING



Moving Door can cause serious injury or death.

- Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving parts.
- Keep people clear of opening while door is moving.
- DO NOT allow children to play with the remote or door opener.

If SAFETY REVERSE does not work properly:

- Close door then disconnect opener using the manual release handle.
- Refer to Door and Door Openers Owners Manuals before attempting any repairs.

⚠ AVERTISSEMENT



UNE PORTE EN MOVEMENT PEUT CAUSER DE GRAVES BLESSURES, VOIRE LA MORT.

• N'installez PAS le transmetteur à moins que l'appareil de sécurité du dispositif de fermeture de porte ne fonctionne conformément au manuel du dispositif de fermeture de porte. La console murale doit être montée à la vue de la porte, à au moins 5 pieds au-dessus du sol et il ne doit y avoir aucune pièce de porte en mouvement à proximité.


- Éloignez les gens de l'ouverture lorsque la porte est en mouvement.
- NE permettez PAS aux enfants de jouer avec le transmetteur ou le dispositif de fermeture de porte.

Si l'inversion de sécurité ne fonctionne pas correctement :

- Fermez la porte, puis déconnectez le dispositif d'ouverture à l'aide de la poignée de dégagement manuel.
- Référez-vous aux manuels du propriétaire de la porte et de l'ouvre-porte avant de tenter toute réparation.

NOTE FOR RESIDENTIAL OPENERS 1995-1997 ONLY

Perform the same steps using these shaded buttons only.

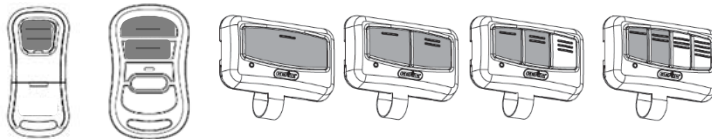

CLEARING REMOTES FROM RESIDENTIAL OPENERS

NOTE: These steps will clear ALL programmed devices.

For openers with a PRGM/SET button (2011-CURRENT):


1. Press and hold the PRGM/SET button until the round LED turns blue, then release. Purple LED begins flashing.
2. Press and hold down both the UP(+) and DOWN(-) buttons at the same time until both LEDs turn blue, then release.
3. Press a remote button to verify the door does not move.

For openers with a LEARN CODE button (1995-2011):

1. Press and hold the LEARN CODE button until the LED stops flashing, then release.
2. Press a remote button to verify the door does not move.

RESIDENTIAL OPENERS 1995-CURRENT

1. Remove the battery pull tab to activate the remote
2. Locate either a square PROGRAM button (PRGM) or round LEARN CODE button on the opener (ceiling). The location could be anywhere on the cover or under a lens depending on the model.

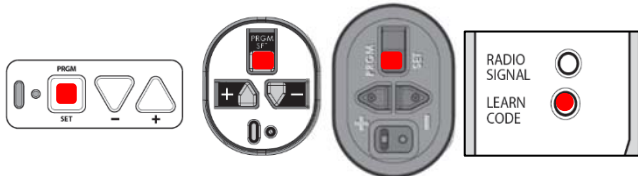

3. Put opener into programming mode - the openers programming window will time out after 30 seconds:
 - If you have a PRGM/SET button - press and hold down until the LED turns blue, then release. Purple LED begins flashing.
 - If you have a LEARN CODE button – press and hold down until the red LED starts flashing, then release.
4. Holding the remote at least 5ft away from the opener, press and release the desired remote button once every 2 seconds until the opener operates.

NOTE: Have an opener from 1995-1997? See next block.

BATTERY REPLACEMENT

Open case as shown, remove and replace CR2032 coin cell battery.

NOTE battery + sign orientation



Battery + sign faces down towards buttons



Buttons are facing down

Prefer an instruction specific to your remote only? Visit our website <https://www.geniecompany.com/accessories> to find your remote – click LEARN MORE and move to the lower left of the page.

This device complies with part 15 of the FCC Rules and Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: 1) l'appareil ne doit pas produire de brouillage; 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.